



INSTALLATION GUIDE

AB8/AB6 AuxBeam Control Mount for 2019-2025 Forester and 2018-2023 Crosstrek

Installing your AB8 or AB6 AuxBeam controller mount is detailed below and takes about 15-20 minutes.




1

Carefully use an interior panel removal kit, a small flathead screwdriver, or a knife to insert in this area of the vent nozzle and dashboard. Gently pry up the vent nozzle and it will release from the dashboard.



2

Using the screws (2 screws for the 6 bank and 4 screws for the 8 bank and AR-600) that came with your AuxBeam controller, install it on the AB8/AB6 mount. Please note the cable routing for the controller, that goes through the mount.

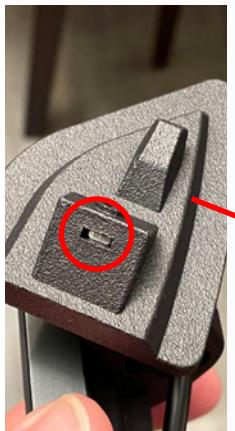

3

Insert the M3 square nut into the slot, then place your AB8/AB6 mount on the vent nozzle as shown above, sliding the defroster vent fin (in yellow above) into the slot of the mount.



4

Flip everything over, then place the clipped washer, as shown in the center image above. Using the supplied hex key, insert the screw with the small washer on it, into the hole with the square nut and tighten. The clipped washer keeps everything solidly locked in place.