



INSTALLATION GUIDE

ScanGuage2 and ScanGuage3 Mount for 2019-2025 Forester and 2018-2023 Crosstrek


Installing your ScanGuage2 and ScanGuage3 mount is detailed below and takes about 15-20 minutes.



Remove the red film from the 3M heavy duty adhesive tape and attach the ScanGuage to the mount.



Carefully use an interior panel removal kit, a small flathead screwdriver, or a knife to insert in this area of the vent nozzle and dashboard. Gently pry up the vent nozzle and it will release from the dashboard.

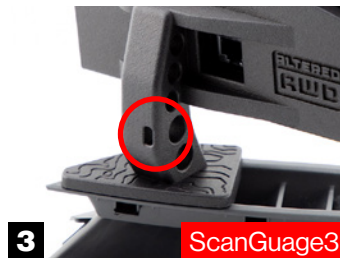

After connecting the data cable to your ScanGuage, for the SG3, there is a hole to run a zip-tie and for the SG2, there is a notch to snap the cable into, so you can manage the data cable.



Insert the M3 square nut into the slot, then place your AB8/AB6 mount on the vent nozzle as shown above, sliding the defroster vent fin (in yellow above) into the slot of the mount.

small washer with flange screw



Flip everything over, then place the clipped washer, as shown in the center image above. Using the supplied hex key, insert the screw with the small washer on it, into the hole with the square nut and tighten. The clipped washer keeps everything solidly locked in place.