





INSTALLATION GUIDE


Diode Dynamics SS2 Fog Light Mount for 2022+ Toyota GR86

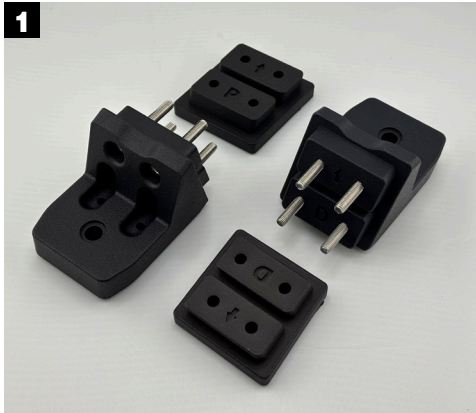

1 Each kits comes with a two (2) fog light mounts)

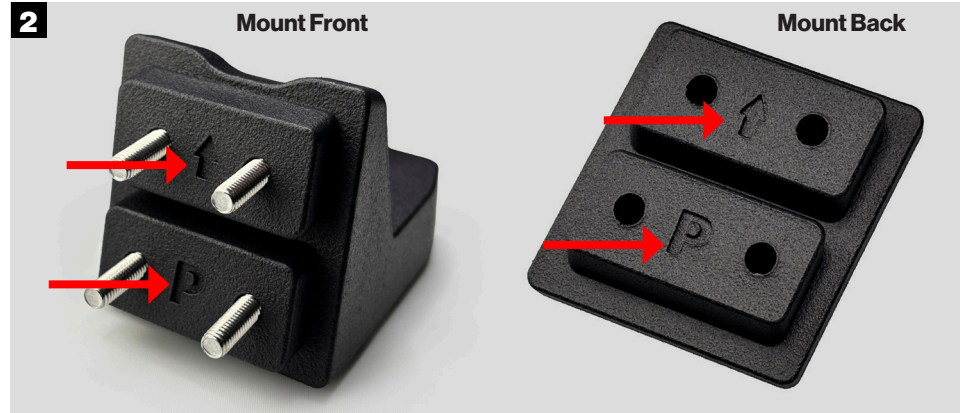

2 Each mount has a "D" for driver side or "P" for passenger side. Make sure the arrow is pointing upwards for the installation.

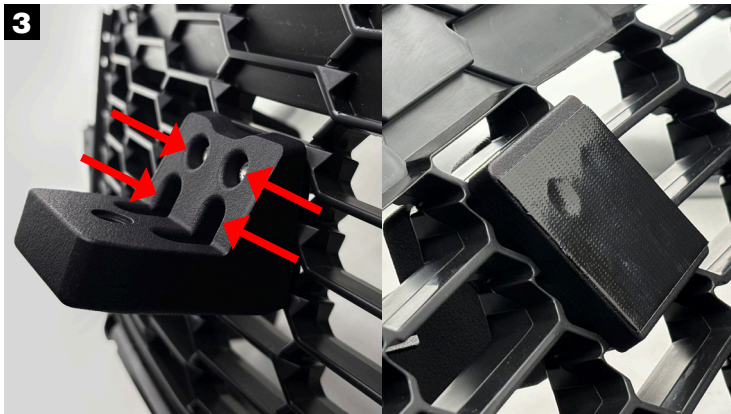


3 Place the mount front into the front bumper grille, then line up the mount back on the back side of the grille. On the mount back, locking nuts are already included behind the protective heavy duty tape seal. Use the included 4mm hex key to tighten down the four (4) bolts hex bolts on the mount front piece.



4 Using a 13mm socket and the hardware that comes with your SS2 fog lights (carriage bolt, washer, and nut) install the bracket on the front mount. **Ensure the bracket is facing in the same direction as the image above.**



5 Using a 10mm wrench and the included 4mm hex wrench, install the SS2 fog light onto the kit's bracket

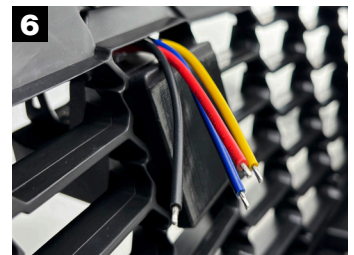

6 The wires for the fog light will run cleanly through the grille, past the new mount.



DONE!