


Use a phillips head screwdriver to remove the two screws from the instrument cluster trim.



Grab the instrument cluster frame on the bottom and pull to release the clips. Then gently work it out of the dashboard.

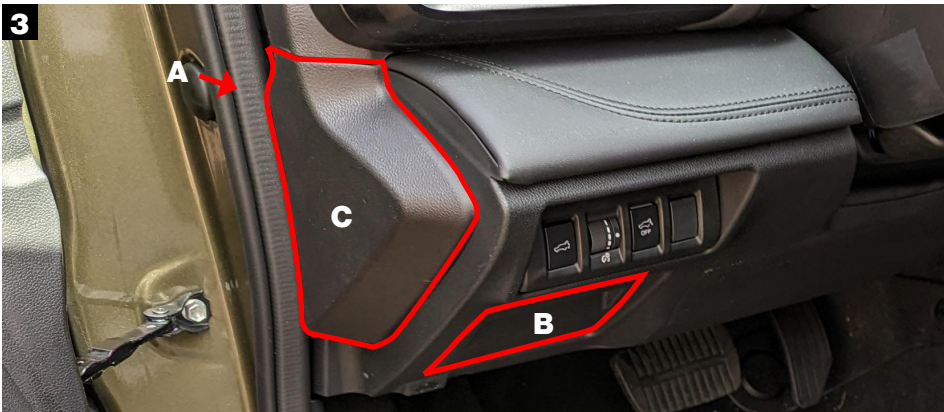


A) Pull the black door seal back, B) Remove the fuse cover and poke your finger or a flat head through towards the panel, C) to pop it loose from the clips.






Once the panel is removed, use a phillips head screwdriver to remove the screw.

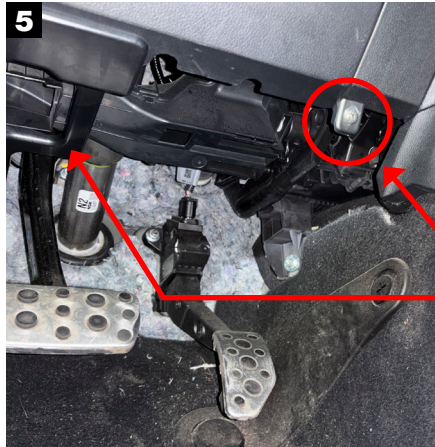

Remove the screw on the bottom right of the lower dash trim panel.



Unclip this panel from directly under the dashboard.

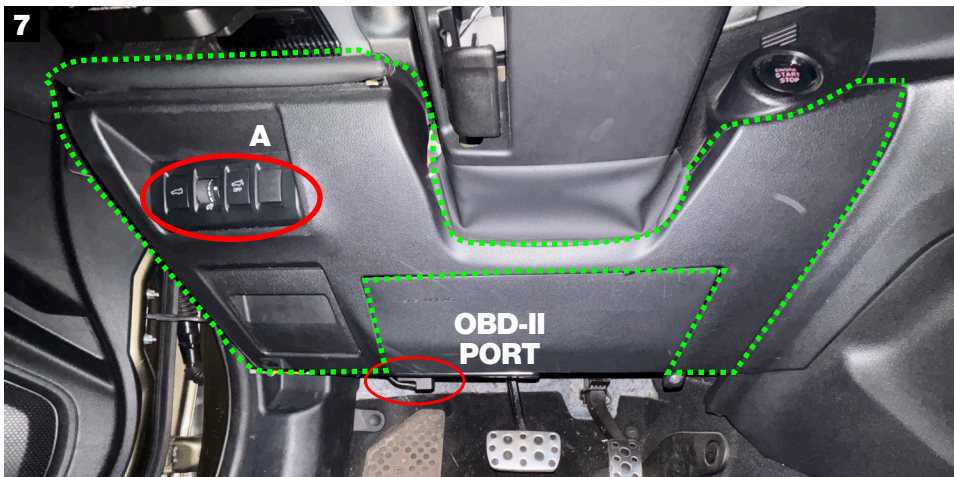


With both screws removed from steps 4 & 5, pull off the lower trim panel (held in place with clips all around). Note for A) you will need to disconnect three connectors behind the panel that connect to these switches, so you can place the entire panel aside.



Unclip the left AC vent. It releases relatively easily. You will need to remove the connector from the Trip Reset switch.



Run the Accessport data cable up through this opening.

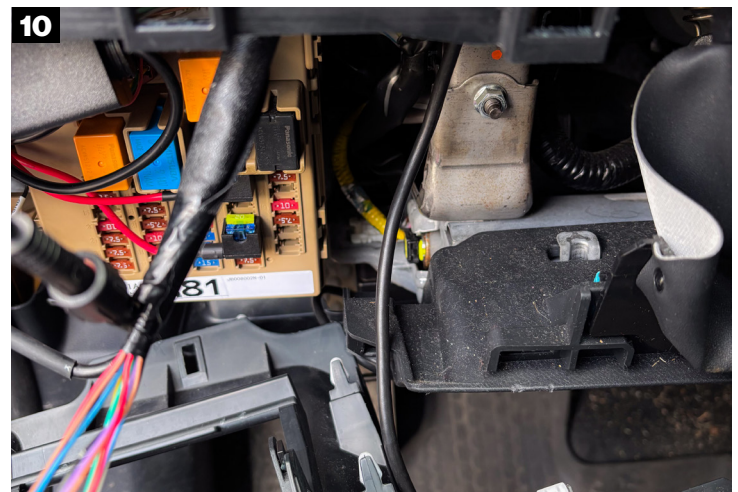

Tidy up your Accessport data cable with a zip tie and connect it to the OBD-II port at the bottom of the dashboard. Refer back to step 7 for location of port.


INSTALLATION GUIDE

Instrument Cluster AccessPort Mount

2022-25 Subaru Outback

11 Put most of it back together.

Clip back in the AC vent trim panel from Step 8, then clip back in the large under dashboard trim panel from Step 7, and then the panel from Step 6.

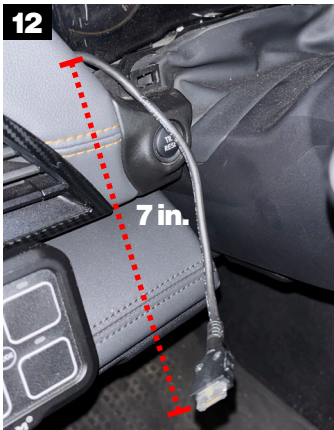


Leave approximately 7 inches of data cable hanging out of the dash as shown in the first photo. Additionally, seat the cable in the notch shown in the second photo.


Lastly, install the instrument cluster frame back into place, while keeping the cable seated and the right amount of length hanging out.

Now, for the FUN part!

13

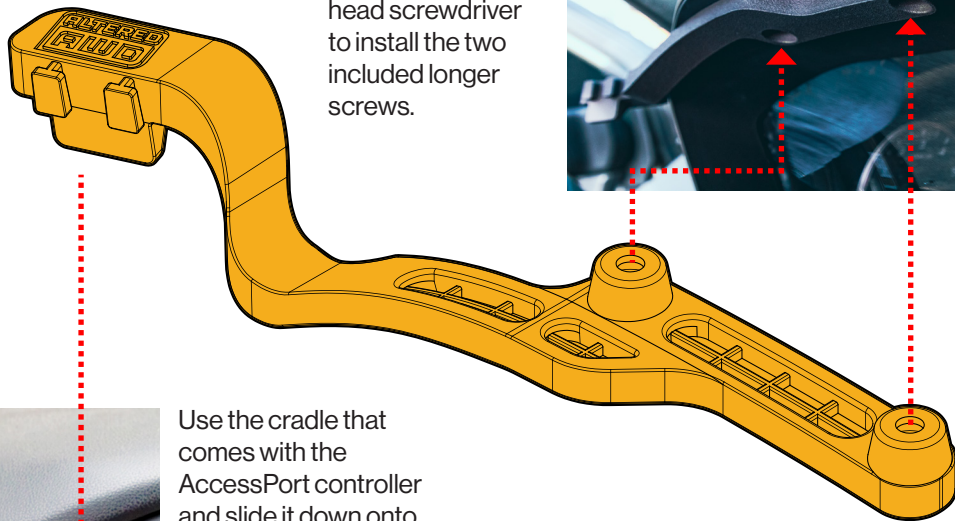

Place your mount into the holes of the instrument cluster frame. Use a phillips head screwdriver to install the two included longer screws.

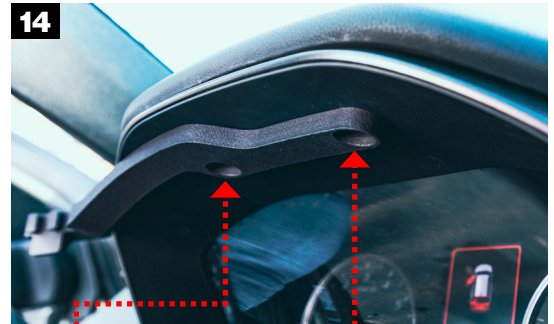

15



Use the cradle that comes with the AccessPort controller and slide it down onto the mount.

Place your AccessPort controller in the cradle and connect your data cable.

Happy adventures!

16

