



INSTALLATION GUIDE




Foot Goes Here Subaru Dead Pedal Replace



Remove your stock dead pedal. Pull with some force from the top, while placing your other hand on the carpeting to hold it in place. There is possible adhesive attaching the pedal to the carpet as well as two fasteners that will simply just pull out.




This is the hardware that is supplied for the installation. A 2.5mm hex key is included as well.

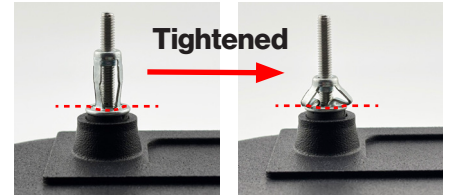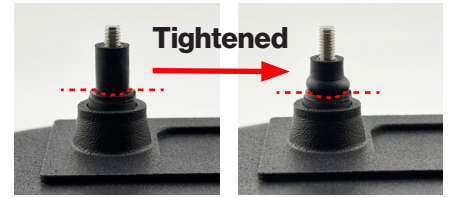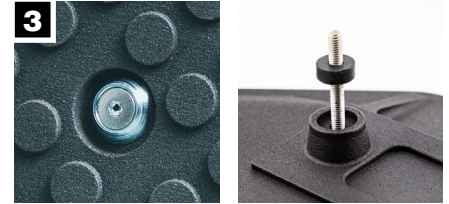


The screw goes thru the countersunk washer. Then add the rubber washer on the other side. Both mounting options work well. The well nut can flex some, while the jack nut offers a more permanent mounting solution. It can always be drilled out if you need to remove it, without damaging your car.

4

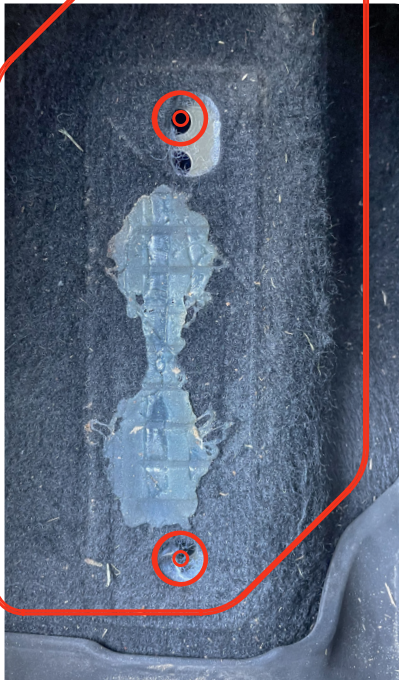

With your hardware set up on the dead pedal, insert the two screws into the holes as shown below.

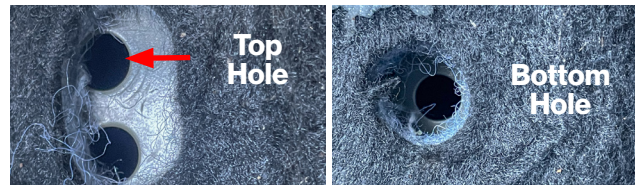

A note for installation.

Well Nut - If you're using this fastener, once you insert the screws and well nuts all the way into the holes, apply firm pressure on the whole pedal as you tighten the screw with the hex key. This, along with the rubber washer, keeps the well nut from spinning freely. Do not over tighten. Replacement well nuts (M4 size) are available on Amazon [HERE](#).

Jack Nut - If you're using this fastener, once you insert the screws and jack nuts all the way into the holes, apply firm pressure on the whole pedal as you tighten it. If you can use a more stable 2.5mm hex screw driver or electric version (slow to medium speed), that will give the best results. Replacement jack nuts (M4x16mm size) are available on Amazon [HERE](#).

5 Final!

